

List of Warning/Indicator Lights



Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.



(U.S.A.)
Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)
Malfunction
indicator lamp



(Canada)



SRS warning light



(U.S.A.)
ABS warning light



(Canada)



Electric power steering
warning light



Pre-collision system
warning light^{*1}

For further information, refer to the Owner's Manual.

Have the malfunction repaired immediately.



Open door warning light



Low fuel level warning light



(On the instrument cluster)

Driver's seat belt reminder light



(On the center cluster)

Front passenger's seat belt reminder light



Low tire pressure warning light



Master warning light

See the Owner's Manual



Turn signal indicator



Headlight high beam indicator



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



ECT SNOW indicator ^{*2}



ETCS SNOW indicator ^{*3}



ECT PWR indicator ^{*2}



Cruise control indicator



AFS OFF indicator ^{*1}



Lexus parking assist-sensor indicator ^{*1}



Slip indicator



Shift position and shift range indicators ^{*1}

^{*1}: If equipped


^{*2}: For automatic transmissions

^{*3}: For manual transmissions

For further information, refer to the Owner's Manual.

Spare Tire and Tool Compartment

n Jack, tools, and spare tire

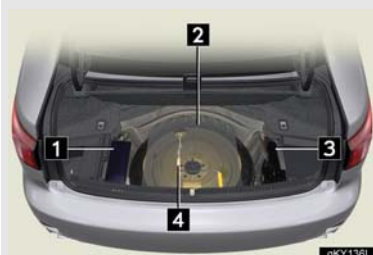

- 1 Tool bag
- 2 Spare tire
- 3 Jack
- 4 Jack handle


n Taking out the spare tire



- 1 Lift up the panel on the trunk floor, and remove the tool tray.
- 2 Loosen the center fastener and remove the spare tire.

If the electronic key battery becomes discharged

n Unlocking and locking the doors

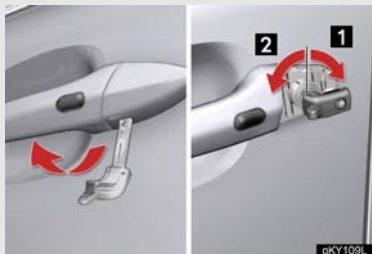

To unlock or lock the vehicle, use the mechanical key to remove the lock cover on the driver's door handle. The mechanical key is stored inside the electronic key.

- 1 Unlocks
- 2 Locks

n Starting the engine




- 1 Depress the brake pedal (for automatic transmissions) or clutch pedal (for manual transmissions).
- 2 Hold the electronic key close to the engine switch (within 0.4 in. [10 mm]), making sure that the button side of the key is facing toward you.
- 3 Press the engine switch within 5 seconds of the buzzer, keeping the brake pedal (for automatic transmissions) or clutch pedal (for manual transmissions) depressed.

For instructions on replacing the electronic key battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.


What to do if ...

If the engine doesn't start

Make sure that the correct operating procedures have been followed.

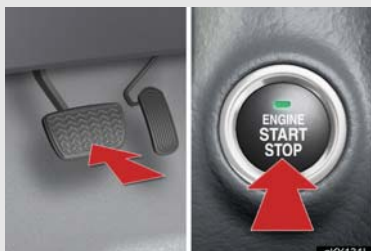

► Automatic transmission

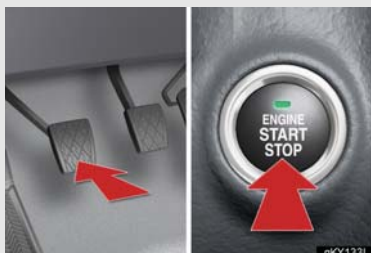

► Manual transmission



Steering wheel lock

Make sure that the steering wheel lock is released.

To release the steering wheel lock, gently turn the wheel left or right while pressing the engine switch. (→P.9)

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds	Tried to lock the doors using the entry function while the electronic key is still inside the passenger compartment	Retrieve the electronic key from the passenger compartment and lock the doors again.
	Tried to exit the vehicle with the electronic key and lock the doors without first turning the engine switch OFF	Turn the engine switch OFF and lock the doors again.
	Closed the trunk while the electronic key is still inside and all doors are locked	Retrieve the electronic key from the trunk and close the trunk lid.
Exterior alarm sounds once for 10 seconds	Tried to lock the vehicle using the entry function while a door is open	Close all of the doors and lock the doors again.
Interior alarm sounds continuously*	Tried to open the door and exit the vehicle without shifting the shift lever to P	Shift the shift lever to P.
Interior alarm pings continuously	Switched to ACC mode while the driver's door is open (Opened the driver's door when the engine switch is in ACC mode.)	Turn the engine switch OFF and close the driver's door.
	Turned the engine switch OFF while the driver's door is still open	Close the driver's door.

* Vehicles with an automatic transmission only